



### **Installing HHO Booster Pump**

- 1, Locate Booster pump between the A-trap return and the return on the bottom of the Brick cell just before the [Y] wye connection.
- 2, Make sure you point the flow arrow on the Booster pump towards the bottom inlet of the brick return.
- 3, Splice the HHO Booster pump red wire into the power wire that comes from the power switch to the black control box.
- 4, Connect the black wire on the HHO Booster pump to a vehicle ground.

What you are doing is force circulating the HHO and electrolyte between the Brick and the A-trap in a continuous loop. This accelerates the flow/separation/volume of HHO production and flow through mechanical means instead of natural convection..